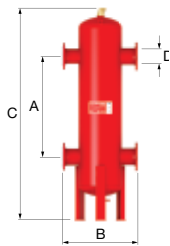
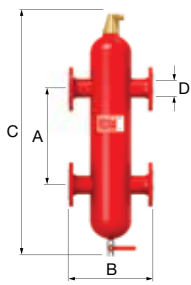


**FlexBalance Plus F**


Тип	Емкость [л]	Размеры			Соединение		Мощность [кВт] *	Поток в системе [м3/ч]	Вес [кг]		Код для заказа
		A [мм]	B [мм]	C [мм]	Номинальный диаметр	D [мм]					
FlexBalance Plus F 50	17,5	400	350	960	50	60,3	100 - 200	5 - 15	28	1	28480
FlexBalance Plus F 65	17,5	400	350	960	65	76,1	180 - 330	10 - 17	30	1	28481
FlexBalance Plus F 80	67	625	470	1390	80	88,9	300 - 450	15 - 30	50	1	28482
FlexBalance Plus F 100	67	625	470	1390	100	114,3	400 - 770	25 - 55	55	1	28483
FlexBalance Plus F 125	171	830	635	2015	125	139,7	700 - 1150	35 - 80	109	1	28484
FlexBalance Plus F 150	322	1040	774	2345	150	168,3	1000 - 1750	55 - 120	197	1	28485
FlexBalance Plus F 200	781	1400	1000	3145	200	219,1	1500 - 2800	90 - 200	342	1	28486
FlexBalance Plus F 250	1792	1850	1220	4000	250	273,0	2500 - 4500	110 - 350	657	1	28487
FlexBalance Plus F 300	1792	1850	1220	4000	300	323,9	4200 - 6400	150 - 500	752	1	28488
FlexBalance Plus F 350	3685	2325	1580	5170	350	355,6	6000 - 7700	200 - 600	1303	1	28489
FlexBalance Plus F 400	6130	2700	1870	5965	400	406,4	7000-10000	250 - 800	1968	1	28490

\* В зависимости от скорости потока.

**Автоматический воздухоотводчик**

Для Flexvent Super, Flamcovent и Flexair.



Тип	Назначение	Макс. рабочее давление [бар]		Код для заказа
Spare vent cap 10 L	Flamcovent (Clean) DN 50 - 650	10	1	28555